



***TECHNICAL BULLETIN OF INDION ASM  
(ARSENIC SELECTIVE MEDIA)***

***ION EXCHANGE (INDIA) LIMITED  
ION HOUSE  
Dr. E. MOSES ROAD  
MAHALAXMI  
MUMBAI : 400011  
TEL: 02230472000***

# *Table of contents*

- *Introduction*
- *Arsenic removal Methods*
- *Basics of INDION ASM*
- *INDION ASM- Unique Features*
- *Design Guidelines*
- *System Hydraulics*
- *Field Trials*
- *Domestic applications*
- *Community Based plants*
- *Pre-treatment requirements*
- *Packaging, Storage and safety*



## INTRODUCTION

*Arsenic contamination is a serious problem found in ground water in Eastern part of India i.e. West Bengal and also in countries such as Bangladesh, Poland, Canada, China, Vietnam, Taiwan, Central America, Thailand and Japan.*

*The normal concentration of arsenic is around 0.1 to 1.5 ppm and in most areas it varies from 0.2 to 0.5 ppm. It is found to be maximum i.e. 3.0 ppm in West Bengal.*

*The World Health Organization (WHO) and EPA current provisional guideline for arsenic in drinking water is 10 ppb. Excess intake of arsenic leads to skin diseases like hyper pigmentation, keratoses melanomas, cardiovascular, renal, hematological, respiratory disorders and cancer.*



## World Map



Circled dots represent ground water arsenic areas

## GLOBAL REVIEW OF ARSENIC AFFECTED AREAS

Country / Region	Population Exposed (millions)	Concentration Range $\mu\text{g/L}$	Groundwater Properties	Other Dissolved Ions
Bangladesh	30	< 0.5 – 2500	Strongly reducing conditions, neutral pH, high alkalinity	High Fe
West Bengal	6	< 10 – 3200	As for (27% >50 $\mu\text{g/L}$ )	High Fe
China	5.7	10 – 1820	Strongly reducing artesian conditions	
Argentina( Chaco Pampean Plain)	2	< 1 – 5300	Oxidizing conditions, neutral to high pH, high alkalinity, arsenic present mainly as As(V)	
Mexico (Lagunera)	0.4	8 – 620	Oxidizing conditions, neutral to high pH, arsenic present mainly as As(V)	Low concentration of dissolved Fe and Mn
Northern Chile (Antofagasta)	0.5	100 – 1000	Oxidizing conditions, high pH: arsenic present mainly as As(V)	
Red River Delta, Vietnam	> 10	1 – 3050	Reducing conditions, high alkalinity	High concentrations of Fe, Mn, $\text{NH}_4$
USA river water, baseline	-----	2.1	-----	-----



## CONVENTIONAL ARSENIC REMOVAL METHODS

*Various treatment technologies have been developed to remove arsenic from ground water. Following methods are available for removal of arsenic from water for potable use.*

### **Chemical Precipitation**

*Chemical precipitation with iron salts followed by filtration is widely used technique in large municipal water treatment and requires an oxidation pretreatment to convert As(III) into As (V) .*

*Removal efficiency is 80 to 95 %, and requires high capital and operating cost.*

### **Ion exchange process**

*Anion exchange resins have been used for removal of arsenic.*

*Commonly occurring anions, TDS strongly reduce arsenic removal potential.*

### **Biological Processes**

*Certain bacteria can bring about the oxidation of ferrous ions which can remove arsenic by either co-precipitation or adsorption. Rapid gravity or pressure sand filters are used as biological reactors.*

*The process is viable for only community level and maintenance of biological plant is very critical.*



## ARSENIC REMOVAL METHODS

### *Adsorption Process*

*Arsenic can be removed by adsorption on to several media mainly activated alumina, granulated ferric hydroxide, activated carbon, activated bauxite, hematite, laterite, iron and manganese coated sand, iron filings and greensand, ion exchange resin. Polymer supported hydrated ferric oxide particles.*

*High turbidity, high concentration of iron and other dissolved salts and pH affect the life of media.*

### *Membrane Processes*

*Reverse osmosis and nanofiltration can remove arsenic efficiently. High capital and operating cost. Disposal of membrane reject water is critical.*



## Basics of INDION ASM

*INDION ASM\* (Arsenic Selective Media) is based on ion exchange resin designed to selectively remove arsenic from ground water without affecting the characteristics of influent water. INDION ASM performs well in spite of the presence of common anions such as chlorides, sulphates or bicarbonates. INDION ASM is used like conventional ion exchange resins.*

*In past decades, adsorption on hydrated Fe (III) oxide (HF0) has been a widely used and accepted process for arsenic removal.*

*As non porous material, freshly precipitated amorphous HF0 (20 -100 nm) increases the pressure drop and due to it's poor mechanical strength, it is found unusable for fix bed system.*

*To overcome the problem, INDION ASM is developed by a novel technique by impregnating nano particles of iron on polymer supporting material.*

*Arsenic removal was evaluated by batch and fixed bed column test at laboratory. Results indicated that hydrated ferric oxide sorbent exhibited an excellent sorption for arsenic removal in terms high capacity, improved selectivity and good mechanical strength.*

*Field trials at Haldharpada - West Bengal (India) also proved its excellent selectivity for arsenic removal without alternating water quality*



*\*- INDION ASM is a product of Ion Exchange (I) Limited and patent has been applied.*



## *INDION ASM - Unique Features*

- *No pretreatment is required for conversion of arsenite to arsenate. Media has affinity towards trivalent and pentavalent arsenic and can tolerate maximum 3000 ppb of arsenic.*
- *Media can treat >50,000 BV where inlet is 50 ppb As<sup>+5</sup> and TDS levels are between 50-100 ppm*
- *Single use or multiple applications.*
- *Media can give < 10 ppb arsenic in treated water on continuous basis.*
- *It is easily adaptable and can be used for POE, POU and community based needs.*
- *Media can effectively adsorb arsenic at lower temperature (12-15°C)*
- *Excellent efficiency even at a Minimum bed depth of 200-250 mm (POU)*
- *Minimum contact time required for arsenic removal process is 1-5 minutes( typically 3 minutes).*
- *Media can give 20% more capacity with on/off condition.*
- *Can remove multiple contaminants with lead and lag system.*



## Unique Features - NANO MEDIA

Easy Disposal. Non-hazardous

Good physical and mechanical strength

High Arsenic Selectivity . No affinity towards common anions


Heavy Metal Removal (Lead, Copper, Chromium, Cadmium etc)

Excellent Adaptability and can be used in conventional cartridges, filters, community and POE units.

Removal of Other contaminants such as Phosphate, Nitrate.

Excellent Hydraulics and Fast kinetics

No Pre-chlorination required

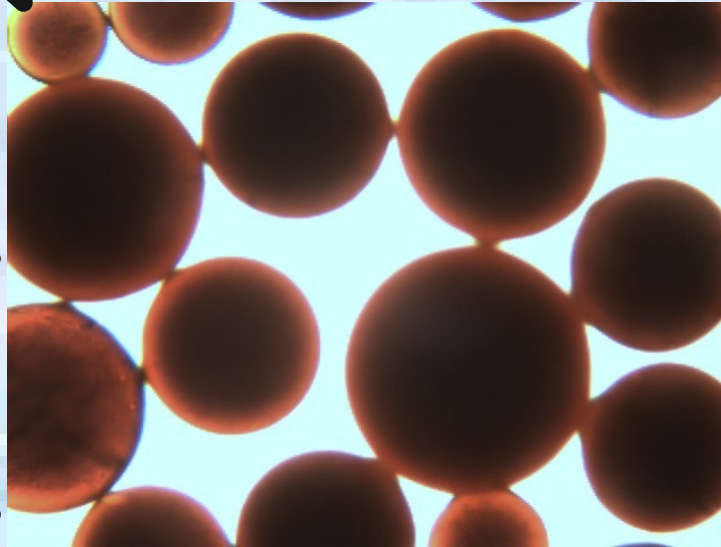

## TECHNICAL SUPERIORITY

	<i>INDION ASM</i>	<i>Granular Ferric Oxide (GFO)</i>
<i>Contact Time (minutes)</i>	<i>1-5</i>	<i>&gt;3</i>
<i>Backwash Frequently</i>	<i>NO</i>	<i>YES</i>
<i>Excellent Hydraulics</i>	<i>YES</i>	<i>NO</i>
<i>Adsorptive Properties</i>	<i>YES</i>	<i>NO</i>
<i>Regenerability</i>	<i>Regenerable/ Multiple Use</i>	<i>NO</i>
<i>Landfill Safe*</i>	<i>YES</i>	<i>NO</i>



\* - Media has passed TCLP as per EPA 1311

## PHYSICAL CHARACTERISTICS

<i>Polymer Structure-</i>	<i>Styrene/DVB</i>
<i>Colour</i>	<i>Reddish Brown</i>
<i>Physical form</i>	<i>Moist Beads</i>
<i>Matrix</i>	<i>Gel</i>
<i>Wet screen grading</i>	<i>0.3-1.2mm ( 14- 52 BSS mesh size)</i>
<i>Osmotic Strength</i>	<i>Good</i>
<i>Mechanical strength</i>	<i>Good</i>
<i>Voids</i>	<i>40% approximately</i>
<i>Bulk Density</i>	<i>0.8 kg/lit</i>
<i>Particle Density (Wetted in water).</i>	<i>1.14 kg/lit</i>
<i>Uniform coefficient</i>	<i>1.7max</i>
<i>Effective size</i>	<i>0.45-0.5mm</i>
<i>Water Retention</i>	<i>50-55 %</i>
<i>Solubility</i>	<i>Insoluble</i>
<i>Approximate Shipping weight</i>	<i>49 lbs/ft<sup>3</sup></i>

## FEED WATER REQUIREMENTS

Presence of common ions, ordinarily found in drinking water, such as, sodium, bicarbonate, chloride and sulfate do not possess any interference because of their reduced affinity towards INDION-ASM. Total Dissolved solids level (TDS) should be within 1500 ppm – 2000 ppm (Max) and no single ion concentration greater than 1000 ppm. Although substances such as Silica, Phosphate, Nitrate and other oxy-anions

compete with Arsenic for adsorption sites, tending to reduce the capacity, the effect is not pronounced if their levels are within acceptable limits.

In addition, no pretreatment is required for conversion of arsenite to arsenate. Arsenic treatment unit will take care of the conversion as well as Iron removal simultaneously.





It is also recommended to ensure that the level of suspended solids or substances that tend to precipitate during the loading process such as Iron, be removed by pretreatment using INDION ISR (Iron Specific Resin), as these solids tend to occupy the void spaces and start accumulating over bed surface over a period of time.

## LIMITING FACTORS

Phosphate, Nitrate and Silica compete for adsorption sites. Although Phosphate and Nitrate form complex anions or colloids combining with other cations and do not bind with the media, we suggest a phosphate concentration < 25 ppm and nitrate concentration < 50 ppm. Media can be used effectively, without any pretreatment if concentration of these ions are well below the limit.

Although increasing pH reduces the capacity, INDION ASM is operable in a wide range of pH (4.5-9.0). At lower pH, presence of competing ions is minimal but as pH rises, their effect reduces the capacity. Any system intended to operate at a pH below 4.5 or above 9.0 should be reviewed with Ion Exchange Technical Executives. Unstable pH levels during the service cycles can lead to unstable performance resulting in reduced efficiency.

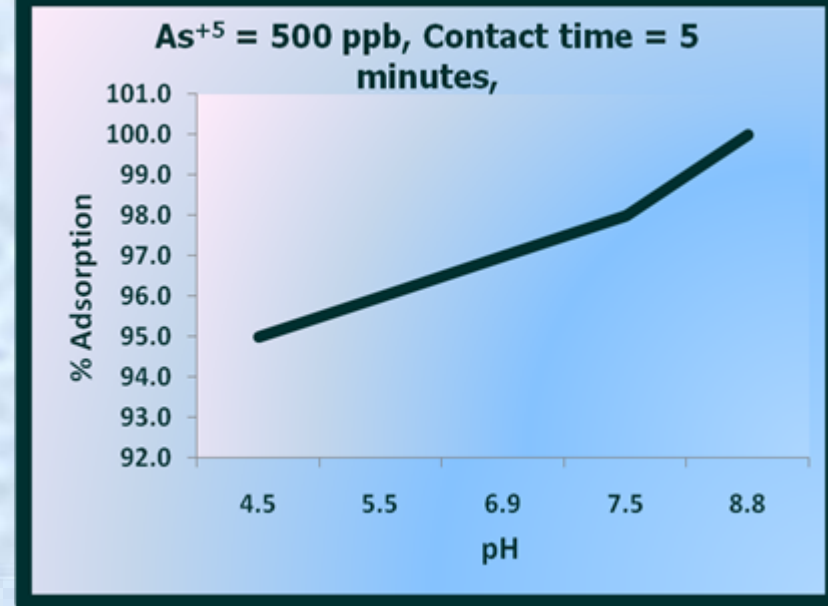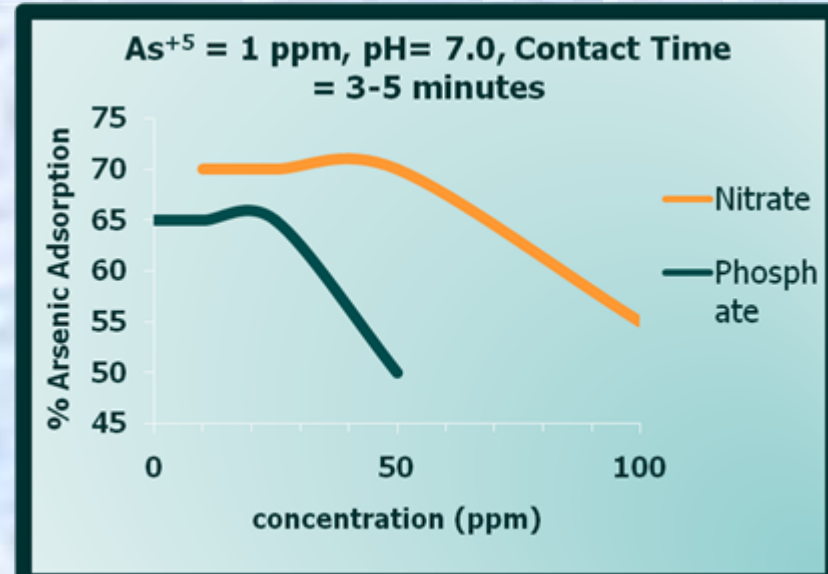

## DESIGN GUIDELINE

### FEED WATER REQUIREMENTS

▪.pH	5.5-9.0
▪.TDS ppm	<1000.0
▪.Turbidity NTU	5.0 max
▪.SS ppm	<5.0 max
▪.Organics ppm	Nil
▪.Oil & grease ppm	Nil
▪.Silica ppm as SiO <sub>2</sub>	25 max
▪.Phosphate ppm as PO <sub>4</sub>	25-30 max
▪.Nitrates ppm as NO <sub>3</sub>	30-35 max
▪.Arsenic ppm	3.0 max
▪.Iron ppm	<0.5 max
▪.Manganese	<0.5 max

### SUGGESTED OPERATING CONDITIONS

Bed depth	0.5 -1 m minimum
Service velocity	15-18 m/h
Backwash velocity	20-22 m/h
Backwash bed expansion	30 -40 %
Backwash time	15-20 minutes
Backwash time	every 1000 BV
Temperature range	60° C max

**Arsenic  
Concentration  
(ppb)**

**Expected  
Throughput  
( Bed Volumes)**

<b>50</b>	<b>40,000-45000</b>
<b>100</b>	<b>20,000-23000</b>
<b>200</b>	<b>10,000-12000</b>
<b>500</b>	<b>4000-4500</b>
<b>600</b>	<b>3000-3500</b>
<b>1000</b>	<b>2000-2500</b>

### REGENERATION

Media is suitable for multiple use and is regenerated with alkaline brine


### DISPOSAL

Exhausted INDION ASM is non toxic and safe for disposal as per TCLP and EPA 1311. Also, follow local regulations or consult Ion Exchange executives for further information.



# SYSTEM HYDRAULICS

Pressure drop of ASM Resin at various temperatures

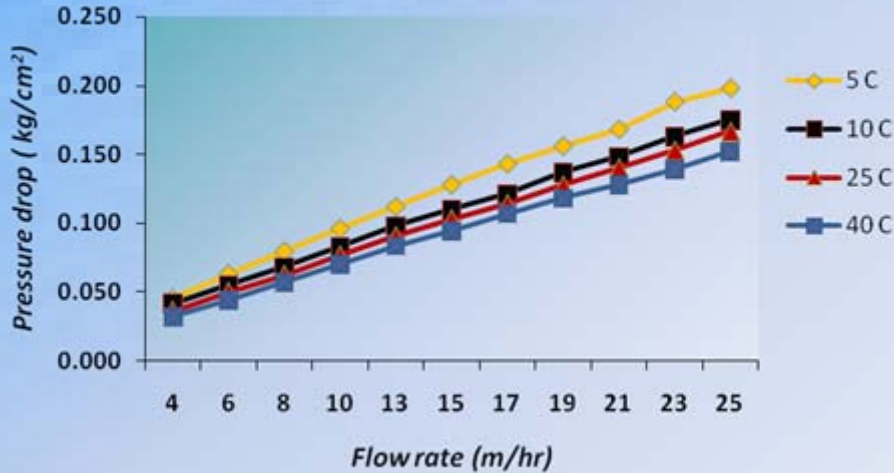

## PRESSURE DROP

This graph can be employed to estimate the pressure drop at various temperatures for different flow rates.

## BACKWASH

After specific intervals, to loosen the bed, Back wash is recommended. Graph indicates the percent expansion of bed at various flow rates.


Note- For approximate conversion, use the following factor

1.1 gpm/sq.ft = 18.292 m/hr

2.1 psi/ft = 0.070306 kg/cm<sup>2</sup>



Percent bed expansion at various flow rates

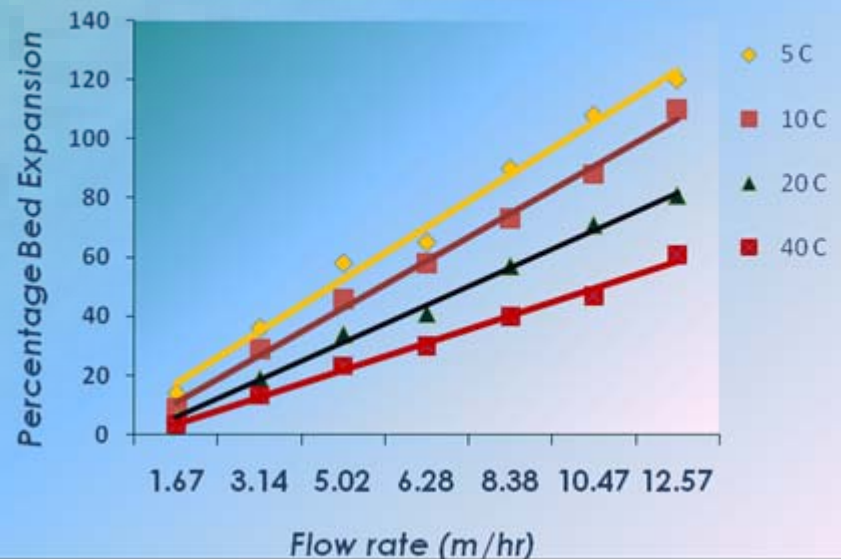

## FIELD TRIALS AT HALDHARPADA ( WEST BENGAL)

Field trials were conducted at Haldharpada- West Bengal with Hand pump attachment unit . HPA consists of Iron removal media(INDION ISR) followed by Arsenic removal media(INDION ASM) .

Figure 1 shows dissolved arsenic concentration in both contaminated groundwater (i.e. influent) and treated water . The arsenic concentration in both water bodies ranges from 150-200 ppb, and the concentration in treated water was consistently less than 10 ppb, which confirms the drinking water standard as per USEPA as well WHO.

The base operating Capacity of INDION ASM is very high and can treat up to 40,000 BV of 150 ppb Arsenic water with minimal leakage. However, pH and other limiting factors do affect the capacity.

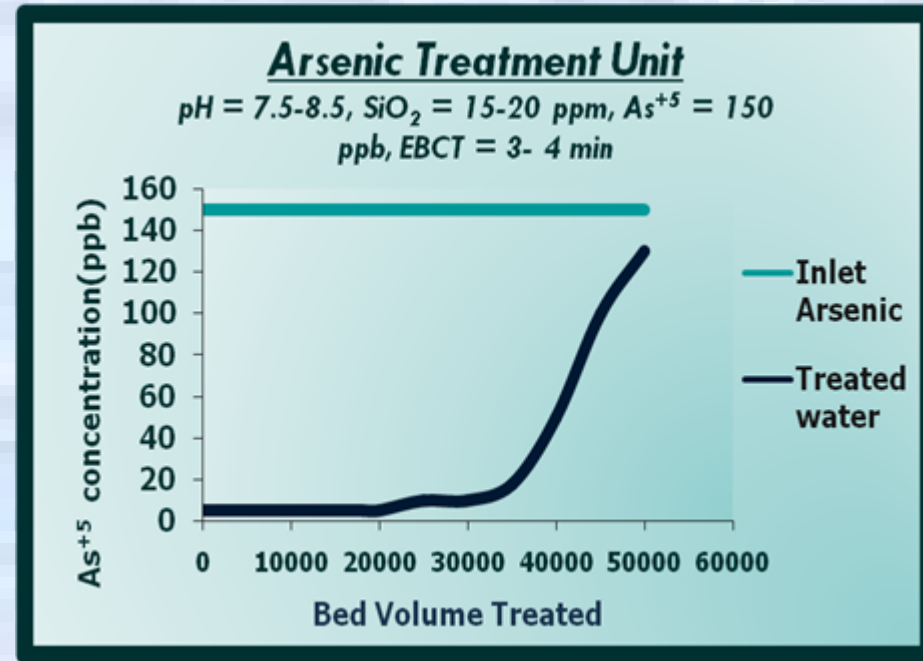


Figure 1 – Results of HPA



# Technical Bulletin - **INDION**® ASM

## Point Of Entry (POE Units)

INDION ASM has been tested at West Bengal-Haldharpada in Hand-pump Attachment Unit and POU (Point of Use Device). The arsenic concentration in both water bodies ranges from 150-200 ppb, concentration in treated water was consistently less than 10 ppb, which confirms the drinking water standard as per USEPA as well WHO

*Arsenic Removal system consists of two media in series:*


- 1. Iron removal unit consist of INDION ISR media (ISR)*
- 2. Arsenic Selective Media (INDION ASM)*

*The flow of unit is 10-15 lits/min. This flow is selected considering the standard hand pump design.*

- ISR Media - It oxidizes dissolved iron into precipitate form and filters it to give iron below 0.3 ppm at the outlet. The media also oxidizes trivalent arsenic (Arsenic III) present in water to pentavalent arsenic (Arsenic V) which can easily be adsorbed by ASM. Part of the arsenic co-precipitates with iron.*

- INDION ASM - Selectively adsorbs arsenic from water without changing water quality parameters.*

*Performance of media can be monitored using arsenic test kits.*

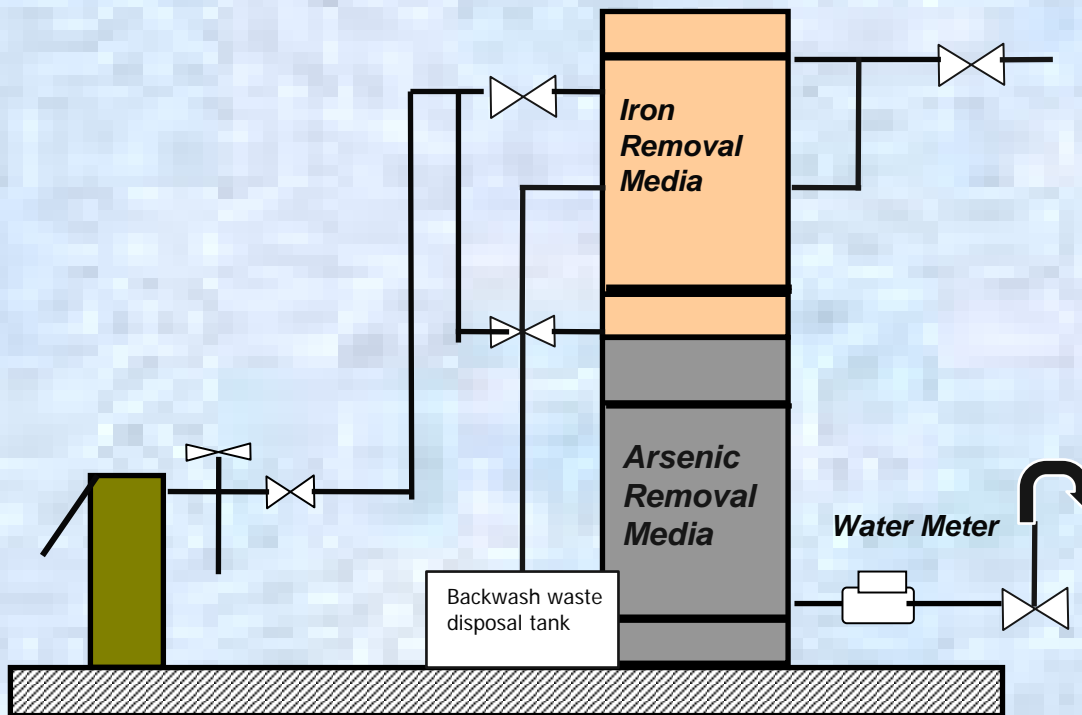

# DOMESTIC APPLICATIONS


## Unique FEATURES

An Excellent Choice for Prevention & Elimination of


- Iron
- Manganese
- Arsenic
- Heavy Metals (Copper, lead, Chromium Aluminum etc)
- Nitrate
- Pathogenic Bacteria & Virus

- Removes Turbidity, colour, odour
- Improves the taste of water
- Does not required electricity
- Storage type purifier for drinking
- The flow of the purifier 8-10LPH
- Life of purifier is 5000-6000Lits
- Solar Life indicator for cartridge replacement

## POU Unit

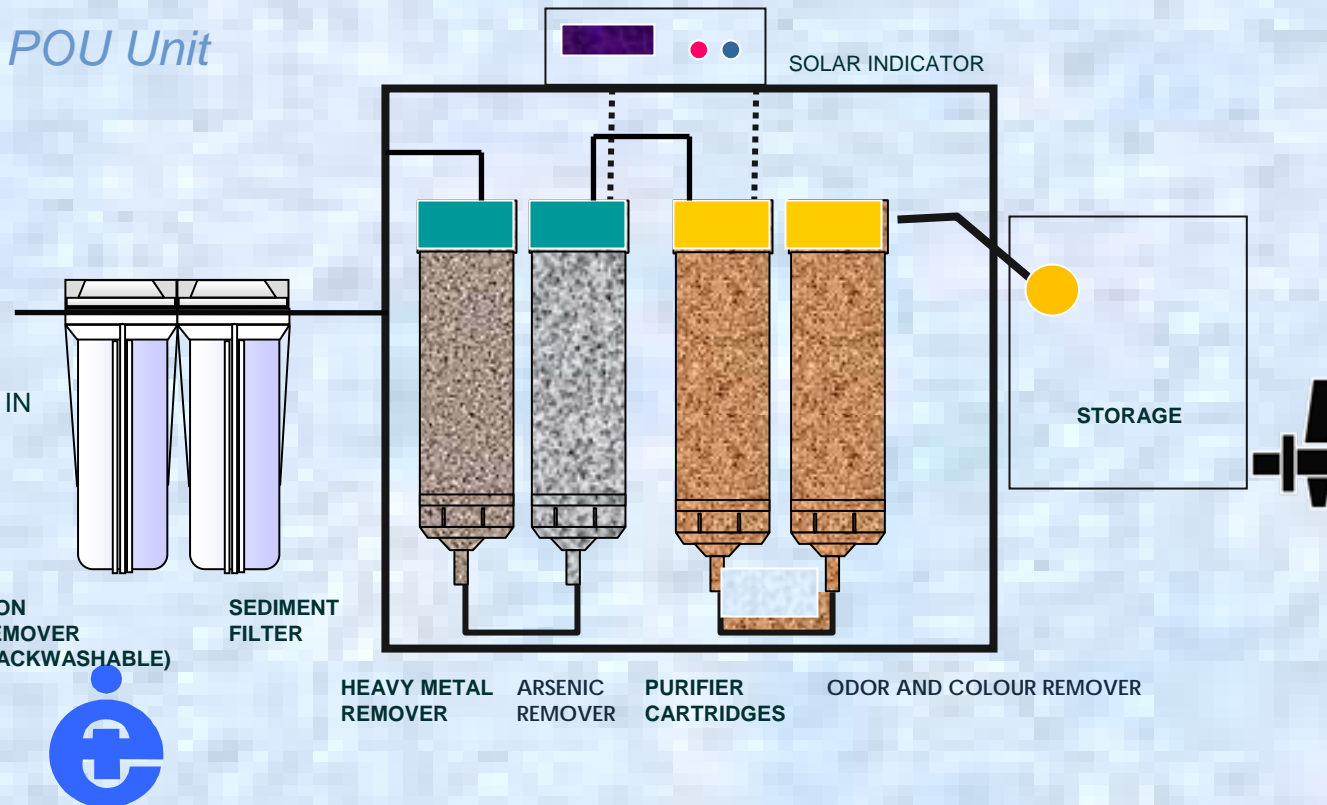

## COMMUNITY BASED LEAD AND LAG SYSTEM

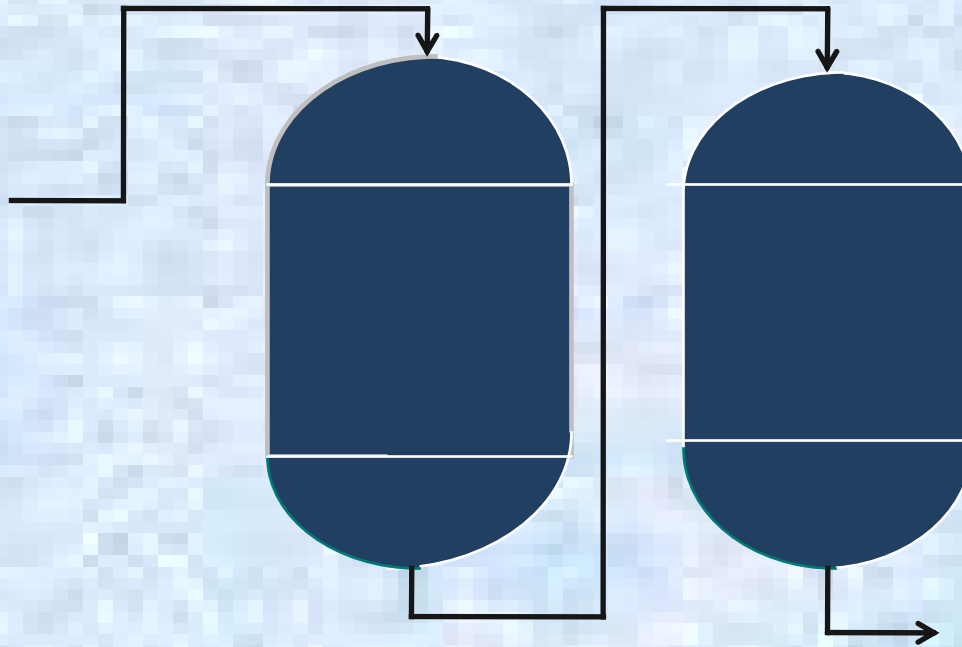

- Typically 3-4 minutes contact time
- Bed depth – 1m minimum
- Distributor Design for 13-52 mesh media
- Sample ports inlet /outlet (both)
- Consult our executives for detail design

- Single or Multiple use
- Design like typical ion exchange vessels

*On Exhaustion of lead, replace lead with lag and put a fresh vessel in lag position*



## PRE-TREATMENT REQUIREMENTS

*INDION –ASM is a robust media with good mechanical strength and generally requires minimal pretreatment . However, the presence of high levels of suspended solids and biological organic matter may foul the media, resulting in the reduction in capacity and life time of media. Hence we recommend pretreatment with INDION ISR for conversion of arsenite to arsenate and removal of iron and other organic matter.*

### INDION ASM *Pretreatment*

- *Removal of Organics*
- *Monitoring pH and removal of suspended solids*
- *Removal of scale forming compounds*



## **PACKAGING, STORAGE AND SAFETY**

*INDION ASM is supplied in 50 liters HDPE bags.*

*Ion exchange resins require proper care at all times. The resins must never be allowed to become dry. Repeated drying and rewetting produce stresses analogous to those due to osmotic shock and can lead to fragmentation of ion exchangers.*

*Acid and alkali solutions used for regeneration are corrosive and should be handled in a manner that will prevent eye and skin contact. If any oxidizing agents are used, necessary safety precautions should be observed to avoid accidents and damage to the resin.*



The INDION range of ion exchange resins are produced in the company' state-of-the art ISO 9001 and ISO 14001 certified manufacturing facility at Ankleshwar, in the state of Gujarat in India.

This datasheet [issues 03/2006] replaces previously issued datasheet

To the best of our knowledge the information contained in this publication is accurate. Ion Exchange (India) Ltd. maintains a policy of continuous development and reserves the right to amend the information given herein without notice.

**INDION** is the registered trademark of Ion Exchange (India) Ltd



#### CORPORATE OFFICE

Ion House, Dr. E. Moses Road, Mahalaxmi, Mumbai 400 011  
Tel: 022-3989 0909 Fax: 022-2493 8737  
E-mail: ieil@ionexchange.co.in ; hocro@ionexchange.co.in

#### INTERNATIONAL DIVISION

R-14, T.T.C MIDC, Thane-Belapur Road, Rabale, Navi Mumbai 400 705  
Tel: 022-3989 0909/3047 2400 Fax: 022-2769 7918  
E-mail: rabcrointl@ionexchange.co.in; export.sales@ionexchange.co.in

#### REGIONAL OFFICES

- **Chennai** - Tel: 044-3989 0909/3910 2900 Fax: 044-2815 3361  
E-mail: checro@ionexchange.co.in
- **Delhi** - Tel: 011-3989 0909/3054 3200 Fax: 011-2577 4837  
E-mail: delcro@ionexchange.co.in
- **Kolkata** - Tel: 033-3989 0909/3043 3400 Fax: 033-2400 4345  
E-mail: calcro@ionexchange.co.in
- **Vashi** - Tel: 022-3989 0909/3913 2300 Fax: 022-2788 9839  
E-mail: mumcro@ionexchange.co.in

#### BRANCH OFFICES

- **Bengaluru** - Tel: 080-2204 2888  
E-mail: bngcro@ionexchange.co.in
- **Bhubaneswar** - Tel: 0674-326 9525  
E-mail: bbsr@ionexchange.co.in
- **Chandigarh** - Tel: 0172-274 5011 Fax: 0172-274 4594  
E-mail: delcro@ionexchange.co.in
- **Hyderabad** - Tel: 040-3066 3101/02/03 Fax: 040-3066 3104  
E-mail: hydcro@ionexchange.co.in
- **Lucknow** - Tel: 0522-301 3401/02 Fax: 0522- 301 3401  
E-mail: luk.general@ionexchange.co.in
- **Vadodara** - Tel: 0265-239 6506/6507 Fax: 0265-239 8508  
E-mail: brdcro@ionexchange.co.in
- **Vizag** - Tel: 0891-324 6253  
E-mail: sales.vizag@ionexchange.co.in

**FACTORIES :** Ankleshwar • Hosur • Patancheru • Rabale • Verna  
**ALL INDIA SERVICE AND DEALER NETWORK**

Visit us at : [www.ionindia.com](http://www.ionindia.com)



# GLOBAL EXISTENCE OF ION EXCHANGE INDIA LIMITED



**AFRICA**

Ion Exchange (India) Ltd. SA  
PO Box: 79597  
St Andrews  
Bedfordview 2145;  
South Africa  
Tel/Fax : +27 11 4533815  
Mobile: +27 796941057  
E-mail : [gourish.chakravorty@ionexchange.co.in](mailto:gourish.chakravorty@ionexchange.co.in)

Ion Exchange (India) Limited  
NTL Godowns  
Nodume Close  
Off Lunga Lunga Road  
Nairobi  
Kenya  
Mobile: +254-734590903/+254-712401056  
E-mail : [suhail.khan@ionexchange.co.in](mailto:suhail.khan@ionexchange.co.in)

Ion Exchange (India) Limited  
C/o Eco Water Management Ltd.  
Kewalram Chanrai Group  
122-132, Oshodi Apapa Expressway,  
Isolo, Lagos, Nigeria  
Mobile: +234 8039753517  
E-mail : [tejas.nene@ionexchange.co.in](mailto:tejas.nene@ionexchange.co.in)

**ASIA**

Ion Exchange Environment Management  
(Bangladesh) Ltd.  
House No.7, Road No.5  
Block # F, Banani  
Dhaka - 1213,  
Bangladesh  
Tel. +880 2 8859426, 8861078  
Fax : +880 2 8861079  
E-mail : [mj.sheikh@ionexchange.co.in](mailto:mj.sheikh@ionexchange.co.in)

PT. Ion Exchange Indonesia  
Jln. Pondasi Ujung No. 102, Kayu Putih  
Jakarta 13210,  
Indonesia.  
Tele : +62 21 489 7212, 475 1013  
Fax : +62 21 4788 2136  
E-mail : [yogesh.purandare@ionexchange.co.in](mailto:yogesh.purandare@ionexchange.co.in)

Ion Exchange Asia Pacific Pte Limited  
1- Suite 1904, 19th floor  
Kenanga International  
Jalan Sultan Ismail  
50250 Kuala Lumpur  
Malaysia  
Tel: +60-3-2162 0381  
Fax: +60-3-2162 0391  
E-mail : [manocha.anil@ionexchange.co.in](mailto:manocha.anil@ionexchange.co.in)

Ion Exchange Asia Pacific (Thailand) Ltd.  
135/9, 7th Floor, Amornphan 205 Tower 2  
Soi Nathong, Ratchadapisek Road,  
Dindaeng, Bangkok 10320, Thailand  
Tel (Direct): +66 2 692 4471  
Fax: +66 2 692 2566 / 4472  
Email : [hreshikesh.bhanushali@ionexchange.co.in](mailto:hreshikesh.bhanushali@ionexchange.co.in)

Ion Exchange Asia Pacific (Thailand) Ltd.  
135/9, 7th Floor, Amornphan 205 Tower 2  
Soi Nathong, Ratchadapisek Road,  
Dindaeng, Bangkok 10320, Thailand  
Tel (Direct): +66 2 692 4471  
Fax: +66 2 692 2566 / 4472  
Email : [hreshikesh.bhanushali@ionexchange.co.in](mailto:hreshikesh.bhanushali@ionexchange.co.in)  
Ion Exchange Asia Pacific Pte Limited  
45, Cantonment Road,  
Singapore 089748  
Tel: +65-6515 8997  
Fax: +65 6515 8959  
E-mail: [manocha.anil@ionexchange.co.in](mailto:manocha.anil@ionexchange.co.in)

**MIDDLE EAST**

Ion Exchange Limited  
Warehouse No. WN-18  
P.O. Box No. 49247  
Hamriyah Free Zone  
Sharjah, U.A.E.  
Tel: +9716 5261606  
Fax: +9716 5261607  
Mobile : +971 50-8790623  
Email: [suneeth.nair@ionexchange.co.in](mailto:suneeth.nair@ionexchange.co.in)

Ion Exchange And Company LLC  
P.O. Box 69  
Ruwi, Postal code 112  
Sultanate of Oman.  
Tel : +968-24790490  
Fax: +968-24790491  
Mobile : +968-99448679  
E-mail : [gaurav.khullar@ionexchange.co.in](mailto:gaurav.khullar@ionexchange.co.in)

Ion Exchange Ltd.  
Pearlcon Business Centre  
Suite -21, Building 1105, 2nd Floor  
Road - 2721, Block - 327  
P.O.Box- 15127  
Adilya, Manama  
Kingdom Of Bahrain  
Tel : +973 1774 5255 / 5239  
Fax: +973 1774 5247  
Mobile : +9733 8305378  
Email: [m.subbu@ionexchange.co.in](mailto:m.subbu@ionexchange.co.in)

**USA & CANADA**

Ion Exchange LLC  
46722 Fremont Blvd.  
Fremont, CA 94538  
USA  
Direct: +510 498-8418  
Fax: : +510 498-4466  
Email: [bmackrodt@ionexchangeglobal.com](mailto:bmackrodt@ionexchangeglobal.com)

Ion Exchange LLC  
4 Cape Dorset Cres Brampton  
Ontario, Canada L6R 3L1  
Tel : +416 712 3940  
Fax: +905 497 4439  
E-mail : [malvin.kalsi@ionexchangeglobal.com](mailto:malvin.kalsi@ionexchangeglobal.com)

